48950-Rev1 23/5/06 11:18 Page 1

morphy richards

Food Processor

Please read and keep these instructions

FOODFUSION

CHOP

Getting the best from your new appliance...

Safety

When processing, the bowl and lid must be correctly located to operate the on/off pulse power dial.

Operation

The detachable drive shaft must be fitted for ALL blades with the exception of the Mini chopper and whisk attachments which fit directly onto the motor drive.

UP TO 5 YEAR GUARANTEE WHEN THIS PRODUCT IS REGISTERED DIRECTLY WITH MORPHY RICHARDS

To register for your 5 year guarantee ring the Helpline numbers below.
Please have the following information available.
Serial number: and model number: 48950 (see page 10 for guarantee details)

CE

For replacement parts, help with using your Morphy Richards products, problems and lots more, contact us by phone or through our website.

UK Helpline: 0870 060 2609
Replacement parts: 0870 167 6640
Ireland 1800 409119

www.morphyrichards.com

48950-Rev1 23/5/06 11:18 Page 2

CONTENTS

Important safety instructions	3
Electrical requirements	3
Features	5
Unpacking and using your appliance for the first time	5
Quick guide	6
Assembly	7
Fitting and using the tools	7
Operating controls	8
Cleaning	8
Storage	8
Top tips	9
Dedicated helpline	9
Your guarantee	10

48950-Rev1 23/5/06 11:18 Page 3

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following of basic common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to person!

IMPORTANT: Damage to the appliance!

In addition we offer the following essential safety advice.

Location

- Remove all packaging and retain for future reference.
- Ensure the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors or in a bathroom.
- Do not place the appliance on a highly polished wooden surface as damage may occur to the surface.
- Do not place the appliance on or near a hot surface such as a hot plate or radiant rings or near a naked flame.
- Do not let the mains lead overhang the edge of the table or work-top, or touch hot surfaces.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.

Personal safety

- Avoid touching moving parts. Keep hands, hair, clothing as well as spatula and other utensils away from processor blades during operation, to prevent personal injury and/or damage to the appliance.
- **WARNING: To protect against risk of electric shock NEVER immerse the appliance body in water or in any other liquid and always ensure the electrical connections are kept dry.**

Other safety considerations

- Disconnect the appliance from the mains supply when not in use, before taking off attachments and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The power cord cannot be replaced. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the appliance for other than its intended use.

Product Specific Safety

- **WARNING: The processor blades are very sharp. Handle with care when using and cleaning.**
- Do not overfill the processor bowl. This could cause damage to the motor.
- Processor lid must be on and located correctly for it to work.

ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13amp plug require replacement, a 5 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

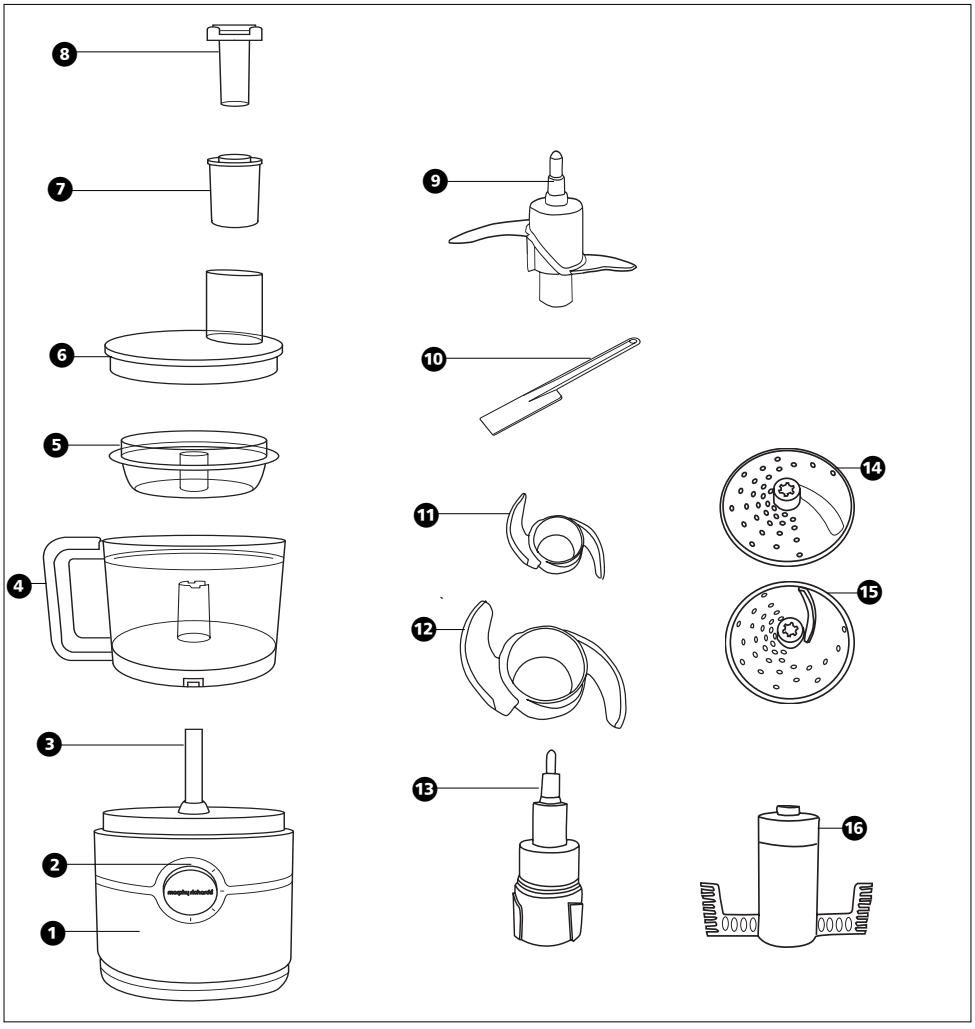
8
7
6
5
4
3
2
1
9
10
11
12
13
14
15
16

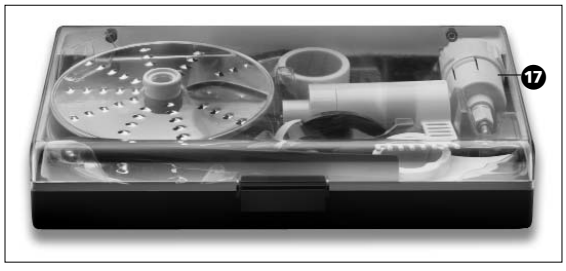
17

48950-Rev1 23/5/06 11:18 Page 5

Features

1. Processor body
2. On/off speed pulse power dial
3. Induction Motor drive
4. Processor bowl
5. Mini chopping bowl
6. Processor lid
7. Large pusher
8. SmallMini chopper blade
10. Spatula
11. Dough blade
12. Chopping blade
13. Detachable drive shaft
14. Thick slicing & coarse shredding blade
15. Slicing & shredding blade
16. Whisk attachment
17. Storage case

Unpacking and using your appliance for the first time

Carefully unpack your new appliance and all its attachments and tools, checking them against the illustrations at the beginning of this book to familiarise yourself with the product. Wash all the parts which are safe to immerse in water.

Never immerse the processor body in water or any other liquid. This may be wiped over with a clean, damp cloth - but only when unplugged from the electrical outlet.

48950-Rev1 23/5/06 11:18 Page 6

QUICK GUIDE

Attachments & tools Name	Function	Type of food	Max vol.	Time	Special notes
CHOPPING BLADE 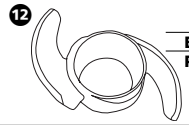	**Chopping**	Meat ,vegetables, cheese, chocolate	700g	15-20 secs	Pulse gives control over texture
	Blending	Soup, drinks	700g	20 secs	
	Pureeing	Cooked vegetables, potatoes, and fruit	600g	10-15 secs	
DOUGH BLADES 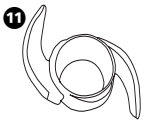	**Mixing**	Pastry, scones	350g	1 min max	Max vol=weight of flour
		Cakes (total weight)	1kg	1 min max	
	Kneading	Bread dough	600g flour	20 secs 400g water	Max vol= weight of flour + 2 min rest Do not over process
SLICING & SHREDDING	**Slicing/Shredding**	Vegetables, cheese, potatoes, fruit, chocolate			
THICK SLICING & COARSE SHREDDING 		Vegetable, cheese potatoes, fruit, chocolate			
WHISK 	**Whisking**	Egg whites	6 eggs	1-2 mins (min 2-max 6)	
	Cream		570ml	40-50 secs	Do not over process
MINI PROCESSOR BOWL 					
SMALL BLADE 	**Chopping**	Herbs and small quantities	20g herbs	2-5 secs	

DO NOT PROCESS FOR LONGER THAN RECOMMENDED TIME. DO NO EXCEED RECOMMENDED MAXIMUM VOLUMES. ALWAYS HOLD THE BLADES BY THE CENTRE GRIP.

Assembly

Setting up

1 Ensure the appliance is unplugged from the mains.
2 To fit the bowl, align the handle as shown. Turn the handle clockwise until it is clicked into place A.
(Note, the handle can be located for left hand ❶ or right hand ❷ use).
3 Fit the detachable drive shaft over the induction motor drive. B
4 Select the appropriate blade and fit over the detachable drive shaft, referring to 'fitting and using the tools' for details.
5 Fit the lid to the processor bowl by aligning the indicator on the lid to the right hand side of the handle and then rotate clockwise, until the lid clicks firmly into place C.
6 Ensure that both food pushers are in place before processing. They should only be removed to insert food D.

FITTING AND USING THE TOOLS

In general, all attachments (with the exception of the mini processor bowl and small blade) which are fitted within the processor bowl must be firmly attached to the detachable drive shaft. Always adjust the attachments until you are sure that they are correctly fitted.

Detachable drive shaft
Insert attachments over the top of the detachable drive shaft and ensure that they are securely clicked into place. Then remove the blade covers (if applicable), taking care as the blades are sharp E.

Chopping blade

1 Fit the processor bowl as detailed previously.
2 Fit the chopping blade over the motor drive, and fit firmly into place F.

Warning: Use extreme caution - the blades are sharp. Always handle the chopping blade by its central plastic section.

3 Place the food into the bowl.
4 Fit the lid and click into place as detailed in the 'Setting up' section.
5 Plug in the processor and switch to speed 1 G. If the processor does not come on, check that processor lid is correctly fitted.
Warning: For safety, always use the food pusher when putting food into the feeder tube. Never feed by hand or utensils.

6 For large foods feed through with the large food pusher. The small pusher should be locked into place when using. When processing small pieces of food, unlock and use the small food pusher, leaving the large pusher in place in the lid H.
WARNING: Do not use the small food pusher without the large food pusher being in place in the lid feed tube.

7 When the processing is complete, remove the blade from the bowl before removing the processed food.

Dough blade

1 Fit the processor bowl into place as described in 'Setting up'.
2 Place the dough blade on the detachable drive shaft. Then place the ingredients in the bowl.
3 Fit the lid and slot into place, make sure that it clicks.
4 Now plug in the processor.
5 Turn the processor on and operate until the dough has formed into a small ball.
6 Remove the blade from the bowl before removing the dough.
IMPORTANT: When kneading dough, do not operate the machine longer than 30 seconds.
Afterwards, wait at least 2

A

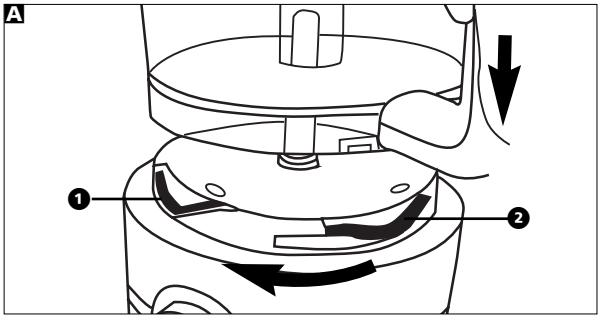

B

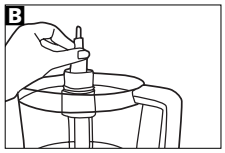

C

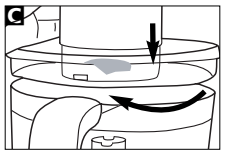

D

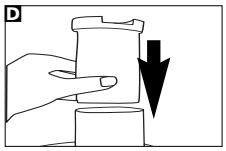

E

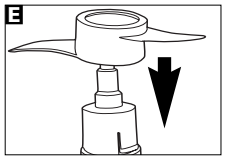

F

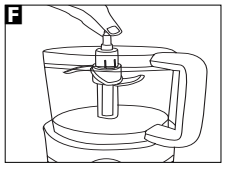

G

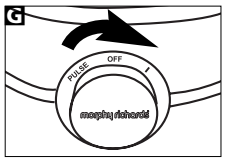

H

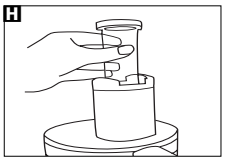

minutes before operating the machine again.
Warning: For safety, always leave the pusher in place whilst operating the processor.

Whisk attachment

1 Fit the processor bowl as detailed previously in 'Setting up'.
2 Place the whisk attachment onto the motor drive.
3 Add ingredients into the bowl.
4 Fit the lid, food pusher and click into place as detailed in 'Setting up'.
5 Plug in the processor.
6 Turn the processor on.
IMPORTANT: Never use the whisk attachment for dough kneading.

Slicing & Chopping
There is a choice of blades; slicing, shredding and chipping (only on certain models).

1 Fit the processor bowl as before on the motor drive.
2 Fit detachable drive shaft.
3 Place the blade of your choice on top of the detachable drive shaft, holding the blade by the centre grip. Ensure that the teeth are facing upwards.

WARNING: Use extreme caution - the blades are sharp.

4 Fit the lid and click into place as detailed in 'Setting up'.
5 Fit the large food pusher into the tube on the processor lid.
6 Use the small food pusher to add food into the processor bowl through the feeder tube.

Mini processor bowl
Use the mini processor bowl to chop herbs and small quantities of ingredients.

1 Fit the mini chopping bowl on the processor body, as detailed previously in 'Setting up'.
2 Slot the mini processor bowl into the main processor bowl, ensuring that the locators on the processor bowl align with the slots in the mini processor bowl.
3 Using only the small blade, place on top of the motor drive. This fits in the hole in the mini processor bowl.
4 Add the food.
5 Fit the lid, ensuring that it is correctly located.
6 Operate the processor for 2 to 5 seconds only.

OPERATING CONTROLS

The processor control has 1 speed and a pulse button.

Using the pulse button allows greater control over the texture of the food produced. It is only intended to be used for short 'bursts' of processing or blending.

CLEANING ACCESSORIES

1 Switch the processor off and unplug from electrical socket.
2 All accessories and processor tools can be washed in hot soapy water except for the processor body.

WARNING: Extreme care must be taken when washing the metal blades as these are extremely sharp.

3 Clean the processor body with a damp cloth.

WARNING: Always unplug the appliance body before cleaning.

STORAGE

- Place the protective cover on to the chopping blade and small blade and place into the storage container for storage.

TOP TIPS

- For coarser chopping, use the pulse button for a few seconds and monitor food texture.
- Pre-cut larger pieces to make them fit into the feed tube. When chopping hard foods(eg meat, cheese) cut into 1 inch/2.5cm cubes.
- For shredding and chipping, place food horizontally into the feed tube. For slicing, place food vertically.
- When slicing carrots, place 2 at a time in the feeder tube to keep upright.

DEDICATED HELPLINE

If you have any difficulty with your appliance, do not hesitate to call. We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your enquiry quickly:

- Name of the product
- Model number as shown on the underside of the appliance or rating plate
- Serial number

UK Helpline	0870 060 2609
Replacement Parts	0870 167 6640
Ireland Helpline	1800 409119

YOUR FIVE YEAR GUARANTEE

Available on registration

This 5 year guarantee is only valid when registered directly with Morphy Richards. If you do not register your product it is guaranteed for 2 years
To validate your 5 year guarantee, telephone our consumer helpline.
Once you have registered your product you will receive written confirmation from Morphy Richards, please retain this information.
Please refer to 2 year guarantee for more details

YOUR TWO YEAR GUARANTEE

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.
Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no. Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.
If the fault develops after 28 days and within the guarantee period from the original purchase date, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase.
Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.
If for any reason this item is replaced during the guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the guarantee the appliance must have been used according to the instructions supplied.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

1. The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
2. The appliance has been used on a voltage supply other than that stamped on the products.
3. Repairs have been attempted by persons other than our service staff (or authorised dealer).
4. Where the appliance has been used for hire purposes or non domestic use.
5. Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

48950-Rev1 23/5/06 11:18 Page 11

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helpline (Office hours)
UK 0870 060 2609
Republic of Ireland 1800 409119

FP48950MUK Rev 1 05/06